


Linelock / Roll Control

Part # LL

Instructions:

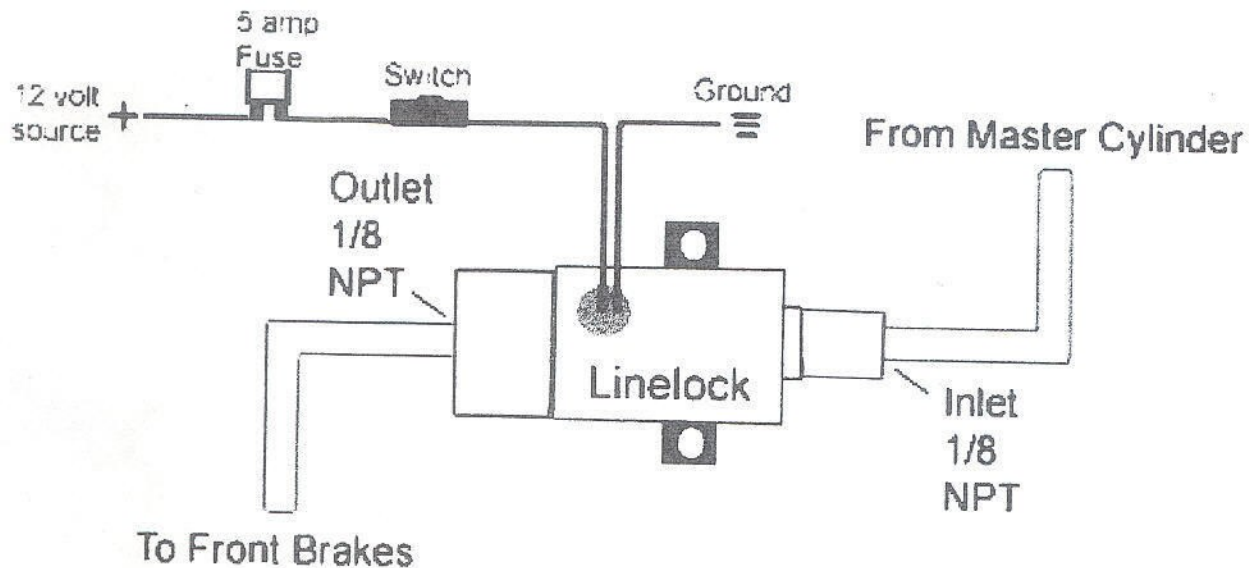

- Linelock uses 1/8 NPT. different size adapters will be required for all other applications, adapters not included.
- Electrical connections, either wire can be used there is no polarity. One wire goes to ground, other wire goes to switch. Use 5 amp fuse from switch to 12 volt source.
- We highly recommend that all installations be performed by a professional.
- Not recommended for use with ABS brake systems.