


08-16 F250 Steering Stabilizer

This kit fits 08-15 Models. Please note the direction of the tie rod bracket when installing to allow full stroke of the stabilizer system.

1. Place wheels in straight forward position.
2. Remove factory stabilizer.
3. Install the new tie rod mount on the tie rod with the supplied 3/8" x 2" u-bolts. Secure with the supplied flange lock nuts and tighten using a 9/16" socket.
4. Install the sleeve in the eyelet of the stabilizer and install in the factory mount on the passenger side using the factory hardware. **See Photo 2.**

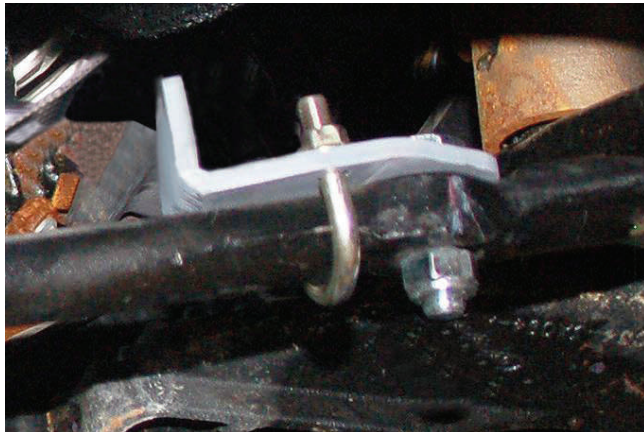

5. Extend the stabilizer and install the stud end in the tie rod bracket with the supplied bushings, cup washers and nut. Tighten the nut until the bushings slightly bulge, do not over tighten the stud bushings.
6. Turn wheels fully to the right and left, making sure that no interference occurs and that wheel stops are contacted.
7. Recheck all nuts and fasteners before releasing installation.



Kit Contents
 1-Stabilizer Cylinder
 1-Tie Rod Bracket
 1-Poly Bag

1-Kit Bag including:
 9/16" X 2" Bolt
 9/16" Flat Washer (2)
 9/16" Nut
 3/8"-1 1/4" x 2" U-bolt (2)
 3/8" Flange Locknuts (2)
 Cup Washers (2)
 Stem Bushings (2)
 9/16" Stem Nut
 Sleeve

CAUTION: Any and all warranties including but not limited to any express warranties, implied warranty of merchantability, or implied warranty of fitness for a particular purpose shall not apply to any product altered in any way outside the premises of the manufacturer or to any product which is not installed in accordance with the written instructions provided by the manufacturer for installation of the product.